



SERVICE REMINDER SYSTEM

SYMBOL	Maintenance work and time frame	CR-V e:HEV	CR-V e:HEV
		2WD	AWD
A* ⁰	Replace engine oil and oil filter	0.4	0.4
B* ⁰	Inspect front and rear brakes	1.1	1.1
	Inspect tie-rod ends, steering gearbox and boots		
	Inspect suspension components		
	Inspect driveshaft boots		
	Inspect brake hoses and lines including ABS lines		
	Inspect all fluid levels and condition of fluids		
	Inspect exhaust system		
	Inspect fuel lines and connections		
	Inspect tyre condition		
	Inspect under body battery cover (e:PHEV only)		
	Check expiry date for TRK (Temporary Repair Kit) bottle		
	Test Drive (noise, stability, dashboard operation)		
	Check lights alignment		
	Inspect vehicle corrosion *1		
Annual inspection of the High Voltage Battery Health. Only for certain full hybrid models.			
2	Replace dust and pollen filter *2	0.2	0.2
3	Replace transmission fluid *4	0.4	0.4
4	Replace fuel filter *3	1.1	1.1
5	Replace engine coolant	0.9	0.9
6	Replace rear differential fluid (AWD only)	-	0.3
7	Replace brake fluid	0.4	0.4
8	Replace air cleaner element *5	0.2	0.2
9	Replace spark plugs *7	0.4	0.4

December 2025

*No. Under the following conditions, maintenance for certain items is required independent of the multi information display.

0 Subtract 0.2 if symbols A and B are displayed together, to adjust for duplication.

1 If item B appears before one year has passed, inspect for vehicle corrosion every year.

2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year. (30,000km/18,500 miles for CR-Vs)

3 It is recommended that you replace the fuel filter every 130,000 km (81,000 miles) if the fuel you are using is suspected to be contaminated with dust, etc because the filter may be clogged sooner.

4 -

5 If you drive in dusty conditions, replace every 30,000 km (18,750 miles).

6 -

7 If you drive at speeds over 160 km/h for more than 50% of driving time, replace the spark plugs every 70,000 km.

8 -