



## SERVICE REMINDER SYSTEM

SYMBOL	Maintenance work and time frame	HR-V
A* <sup>0</sup>	Replace engine oil and oil filter	0.5
B* <sup>0</sup>	Inspect front and rear brakes	1.1
	Inspect tie-rod ends, steering gearbox and boots	
	Inspect suspension components	
	Inspect driveshaft boots	
	Inspect brake hoses and lines including ABS lines	
	Inspect all fluid levels and condition of fluids	
	Inspect exhaust system	
	Inspect fuel lines and connections	
	Inspect tyre condition	
	Inspect under body battery cover (e:PHEV only)	
	Check expiry date for TRK (Temporary Repair Kit) bottle	
	Test Drive (noise, stability, dashboard operation)	
	Check lights alignment	
	Inspect vehicle corrosion *1	
Annual inspection of the High Voltage Battery Health. Only for certain full hybrid models.		
2	Replace dust and pollen filter *2	0.1
3	Replace transmission fluid *4	0.4
4	Replace fuel filter *3	1.7
5	Replace engine coolant	0.6
7	Replace brake fluid	0.4
8	Replace air cleaner element *5	0.9
	Replace spark plugs *6	
9	Check valve clearance *8	2.1

December 2025

- \*No. Under the following conditions, maintenance for certain items is required independent of the multi information display.
- 0 Subtract 0.2 if symbols A and B are displayed together, to adjust for duplication.
- 1 If item B appears before one year has passed, inspect for vehicle corrosion every year.
- 2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year. (30,000km/18,500 miles for CR-Vs)
- 3 It is recommended that you replace the fuel filter every 110,000 km (68,500 miles) if the fuel you are using is suspected to be contaminated with dust, etc because the filter may be clogged sooner.
- 4 -
- 5 If you drive in dusty conditions, replace every 30,000 km (18,750 miles).
- 6 More than 10% of driving time above 130km/h, replace the spark plugs every 40,000km.
- 7 -
- 8 Sensory Method: Adjust the valves during service 120,000 km if they are noisy.